

ISTA
system
version

4.01.21.17412


61 13 021

Replacing fuse box for
distribution box




Necessary preliminary tasks:

- Disconnect [battery negative lead](#)
- Remove [right glovebox with housing](#)
- Remove [trim for instrument panel, bottom left](#)

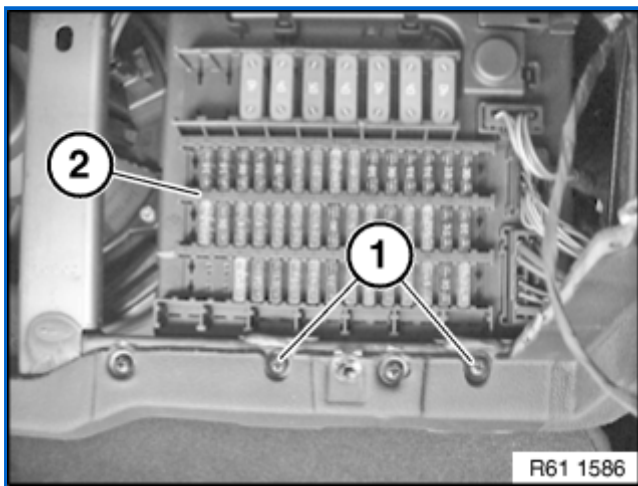


Release screws (1).

Pull fuse box (2) downwards.

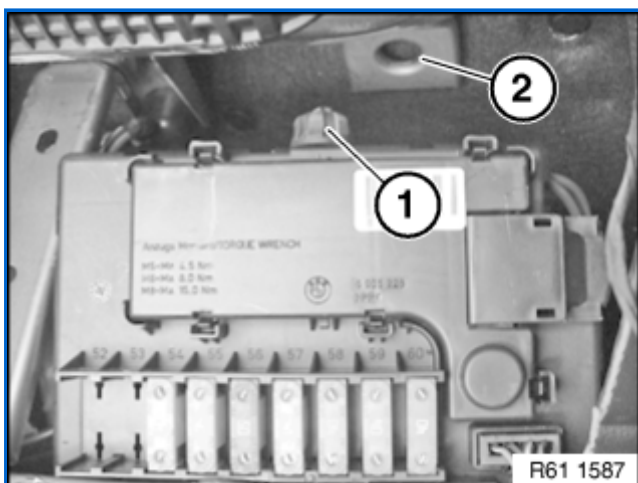

Installation:

Make sure pin (1) is correctly seated in guide (2).

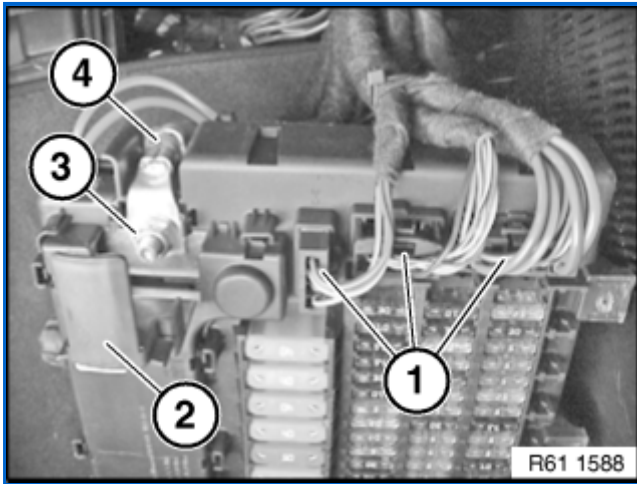

Disconnect plug connection (1).

Detach all fuses.

Open cover (2).


Unscrew nut (3).

Disconnect battery positive lead (4) from fuse box.

Installation:

Make sure battery positive lead is correctly seated.

Tightening torque [61 13 2AZ](#).

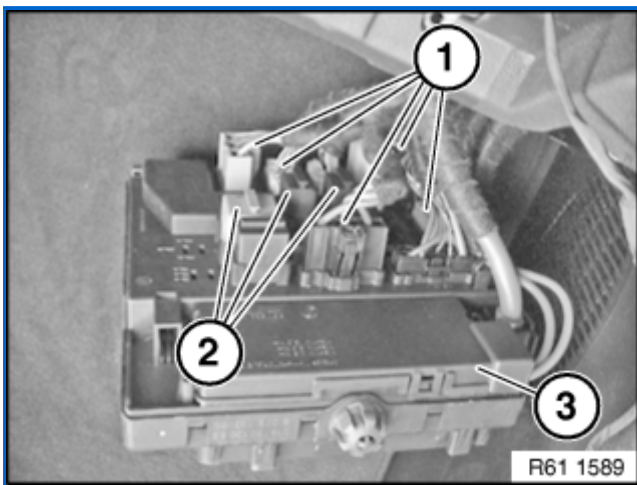


Disconnect plug connection (1).

Detach relay (2).

Open cover (3).

Note:

Write down colours and positions of cables before removing.

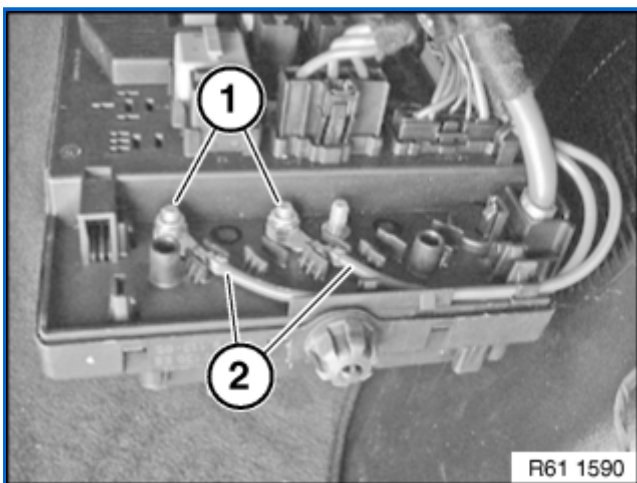

Unscrew nuts (1).

Tightening torque [61 13 2AZ](#).

Remove cables (2).

Note:

Write down colours and positions of plugs before removing.